


**Enjoy peace of mind.
Register your appliance today.**

Stay updated on better living services, safety notices and shop for accessories.

- 1. Open the camera app on your smartphone and point at the QR code to scan**
Product Registration QR code is located on the front of your appliance or inside the door rim*.

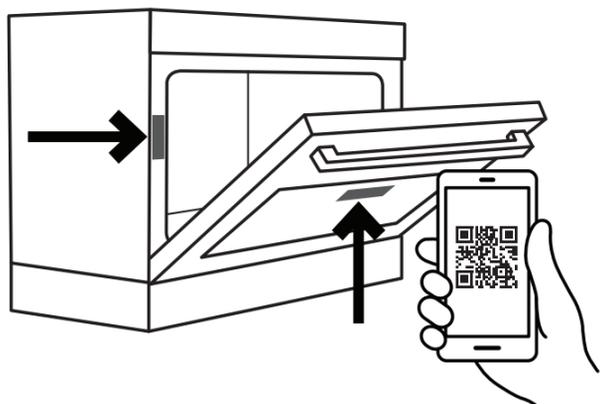

- 2. Tap the notification or link to open the registration form**
- 3. Complete your details and enjoy peace of mind**

*Exact location of QR code may vary depending on oven model



Need more help?

To access your detailed user manual online, simply scan the QR code on your smart phone. If you prefer a printed manual, please contact our Customer Care Centre using details below.



Contact us if you need more help

Electrolux Home Products Australia

telephone: 13 13 49
email: customercare@electrolux.com.au
web: electrolux.com.au

Electrolux Home Products New Zealand

telephone: 0800 436 245
email: customercare@electrolux.co.nz
web: electrolux.co.nz

Dear Customer,

Thank you for purchasing a Westinghouse appliance. You have chosen a product that comes from a history of durable and reliable products loved by many families. We look to help you make the most of your time at home, so you can spend your time doing what you really love, with the ones you love.

Welcome to Westinghouse.

Ready



This is a Quick Start Guide. Please refer to user manual online for detailed information and installation

To access your detailed user manual online, simply scan the QR code on your smart phone.

For more detailed information and installation guide refer to user manuals at westinghouse.com.au/manuals

Before you start, please make sure:


- Your oven has been correctly installed by a qualified person.
- Your oven has power and is switched on.
- You've removed all relevant packaging.



Most of the packaging materials can be recycled. Please dispose of them at your local recycling centre or in your own recycling bin.

Set...

Get to know your control panel:

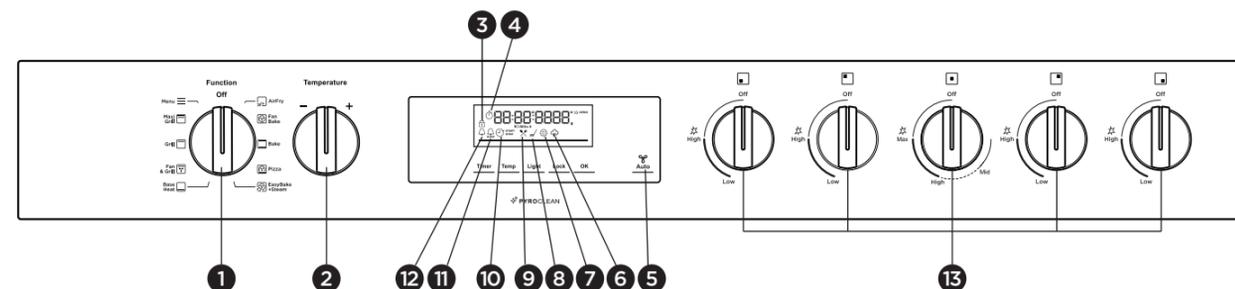

- | | | |
|---|---------------------------------------|-----------------------------------|
| 1 Oven function selector | 5 H2H Button | 10 Time delay icon |
| 2 Oven/grill temperature control | 6 Steam cooking indicator icon | 11 Cooking time icon |
| 3 Lock icon | 7 Settings icon | 12 Minute minder icon |
| 4 Uptimer icon | 8 Cleaning icon | 13 Gas hob burner controls |
| | 9 Assisted cooking icon | |

Set...


Installing the accessories

1. Install the telescopic slides (where supplied) to the side racks. Refer to the installation guide supplied with the telescopic slides.

2. Insert side racks.


There is a left hand and right hand version (see image).

1. Insert the rear peg into the rear access hole, ensuring that the peg is fully inserted.
2. Then locate the front peg into the front access hole and push in firmly.

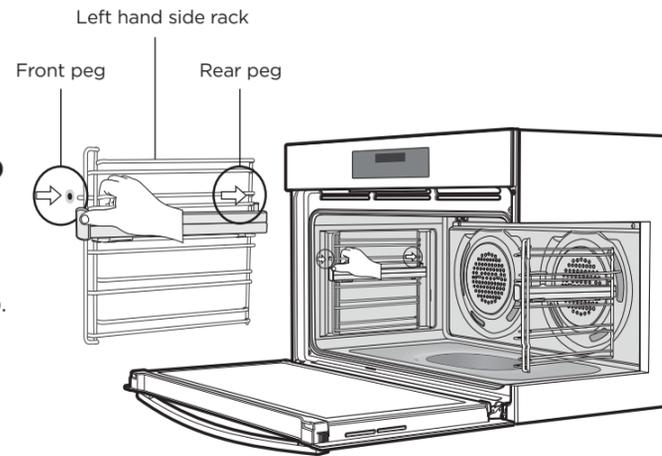


3. To fit a shelf or tray to side racks:

1. Locate the rear edge of the shelf in between guide rails of the side rack. Ensure the same rail positions on both sides of the oven are being engaged.
2. With the front edge raised, slide the shelf into the oven.
3. Once the detents have passed the front edge of the side rack, the shelf can be pushed completely in.

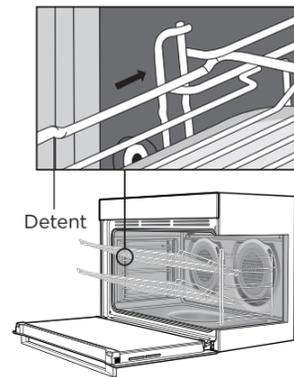


4. Fit shelf/tray (where supplied) to telescopic slides

1. Push the shelf or tray along the top of the slide until it hits the back post.

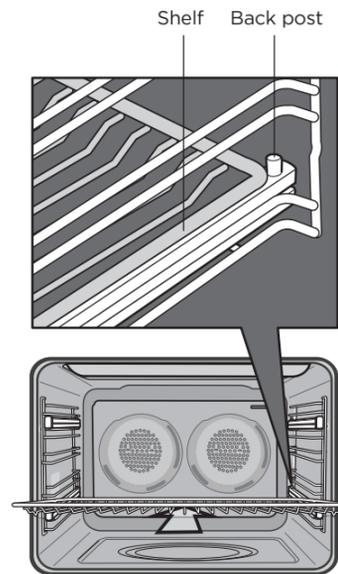

2. Drop the front of the shelf or tray onto the slide ensuring it sits behind the front post of the slide.

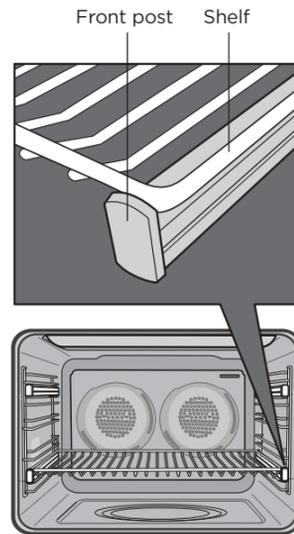


3. When fully inserted the shelf/tray should not interfere with the closed oven door.

Set the time

Before you can start using the oven, you must set up the clock.

- After the oven has been electrically connected, '12:00' will be displayed and the hour minute digits will flash.
- Turn the temperature selector (Left - or Right +) to set the time of the day.
- Press OK to complete the clock setting.


Note: The clock has a 24 hour display.

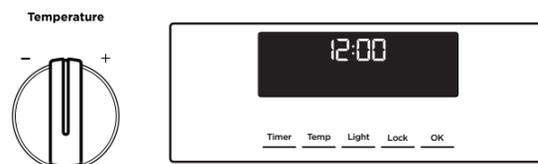

Condition the oven (to burn off any residue)

New appliances can have oil or residue left from manufacturing. You will need to heat your oven for 2 hours before using it for the first time.

1. Turn the oven selector dial to "Fan Bake".
2. Using the temperature control knob, set the oven at 180°C for approximately 2 hours. Please ensure that the room is well ventilated during this process.

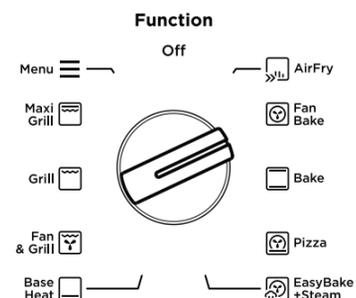

Go!

You're ready to use your new Westinghouse appliance. A few tips from us:

Remember to pre-heat each time.

For best cooking results pre-heat the oven. Pre-heating allows the oven to reach the required temperature quickly and efficiently as well as cook food at the correct temperature for the entire cook time. Recommended pre-heat time is 30 minutes for baking and 3 minutes for grilling.

Choose the right program for the best result:

Gas cooktop

Whether you're cooking a stir fry, searing a steak, grilling vegetables or boiling water, our intense burners provide high heat to help lock in the flavours or to speed things up.

To light a burner, firstly press the knob and turn it anti-clockwise to the 'High' flame position. Release the knob once the flame is established and turn it further anti-clockwise to reduce the flame height as desired.

Dual flame wok hot plate

Our smart dual ring flame control wok burner offers flexibility and precision to instantly increase and drop flame intensity so you can enjoy cooking up a quick and heated stirfry as well as simmering away your soup and gravy to perfection using the same wok burner.

To light the wok burner, press the knob and turn anti-clockwise to ignite the inner and outer rings. Release the knob when both inside and outside flames are established. Turning the knob further anti-clockwise will reduce the height of the outer flame. Turning the knob to 'Mid' and further will extinguish the outer flame and control the height of the inner flame. Turning the knob back to 'High' will reignite the outer flame.

Note 1: Gas control has limited movement.

Note 2: If the flame goes out when either knob is released, simply press the knob again, this time holding it down for approximately 5 seconds.

GAS COOKTOP



HOB2HOOD



Hob2Hood is an advanced automatic function which connects the hob to a special hood. Both the hob and the hood have an infra-red signal communicator. The speed of the fan is defined automatically on the basis of the mode setting. You can operate the hood fan from the control panel using the HOB2HOOD button.

AIRFRY



AirFry for that perfect, healthy crunch. When a food craving hits, make healthier and delicious food right in your oven. Deliver all the flavour and none of the guilt. AirFry allows you to make healthier tasty meals for the entire family - right in your oven.

EASYBAKE +STEAM



EasyBake +Steam adds humidity at the beginning of the baking process. In bakery products, this allows the dough to rise and helps create a moist interior while obtaining a golden and crispy crust. Before preheating, when the oven is cold, add water to the cavity well. Refer to the chapter "EasyBake +Steam" in the full user manual for more details. For best results preheat the empty oven for 10 minutes prior to inserting food.

FAN BAKE



This setting is best used when cooking on multiple shelves at once or reheating complete meals for your family.

Refer to your full user manual for more details on oven functions.

Set your temperature

Turn the temperature selector left (←) or right (→) as required to set the desired cooking temperature.

Note: the temperature can be adjusted at any time throughout the cooking time.

